


INSTALLING HEART RATE INTERFACE ON A MODEL D

PN 1761
3 J-clips and HR receiver w/cable

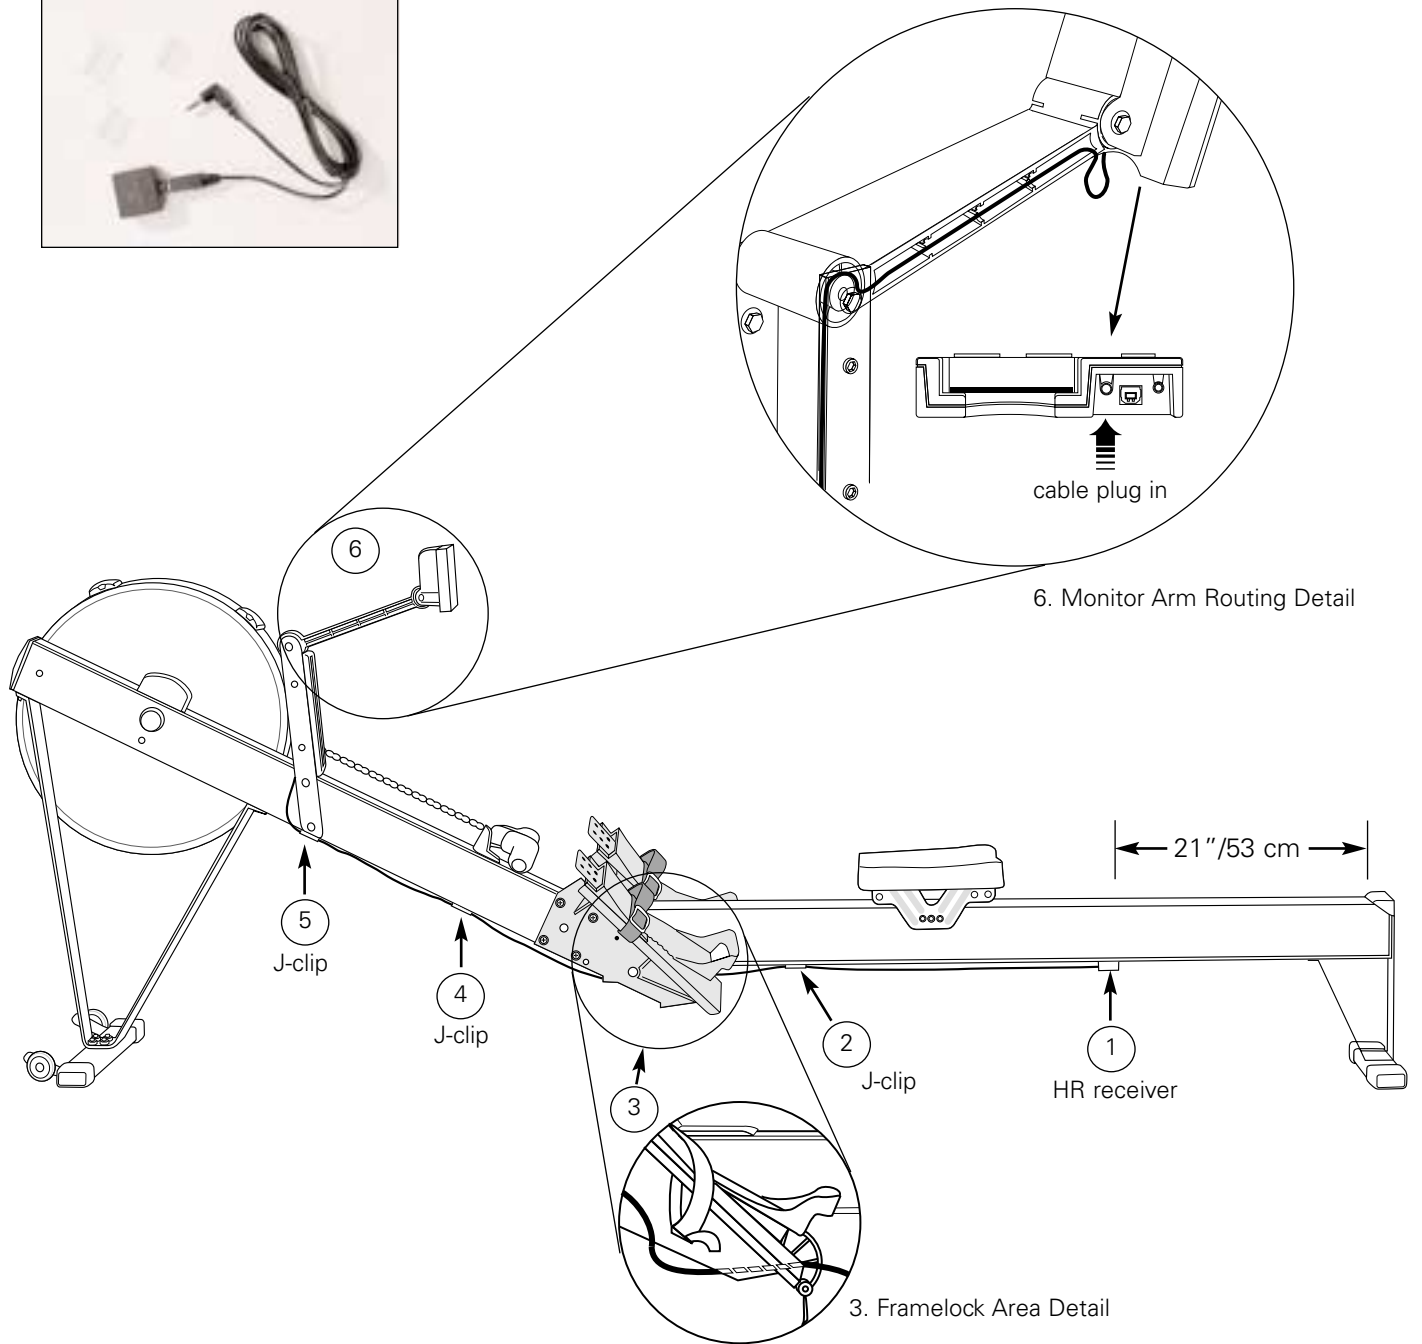

NOTE FOR STORAGE: Before you disconnect monorail from front end, remove receiver from VELCRO® patch and remove cable from framelock area.